



GETTING TO KNOW THE GMC MOTORHOME PRE-TRAVEL CHECKLIST

BEFORE YOU GO:

- Routinely check under-hood automotive components: oil level, coolant level, washer fluid, brake fluid level and battery connection.
- Check tire pressure. Be sure to check the spare tire, too. Refer to the tire manufacturer's recommended pressures.
- Open fuel filler door. Add gasoline as require. Be sure your instrument panel fuel switch is on MAIN.
- Open the utilities door. See that the power cord is plugged into the compartment receptacle.
- See that the external water connection is capped.
- Close the utilities door securely.
- Open the generator compartment door and check the motor oil level. If it reads FILL, consult the operating manual for correct oil; add as required.
- Make sure the holding tank dump valve handle is pushed fully in and held in place securely.
- Store the holding tank extension hose in the rear bumper tube.
- Open the LPG tank compartment door. If your refrigerator can run on 12v current, turn off the main LPG valve and securely close the door.
- Enter the Motorhome. Use the inside push button to relock the door. Always lock the door when moving!
- Check the generator hour meter to see when it's time for routine maintenance.
- Use the monitor panel to check the living area systems: 1) LPG supply; 2) living area battery voltage (if it's below 11, it needs charging – it recharges automatically when your Motorhome is driven, when the generator is run or when the exterior power cord is plugged in); 3) water supply; and 4) holding tank level.
- If there is water in the supply tank, switch on the water pump (near the monitor panel). Run water through the kitchen and bathroom taps.
- Turn the water pump to OFF for traveling.
- Put away loose objects. Securely close cupboard doors and lock the refrigerator.
- Be sure the pilot light controls on the range and oven are turned off.
- Check the electrical compartment in the wardrobe to see that the two circuit breaker switches are ON and the electric hot water heater switch is OFF.
- Make sure there are spare fuses for the living area fuse block.
- Return the television antenna to the travel position.
- To run the roof air conditioner while traveling, you must also operate the generator. Start the generator with the switch by the monitor panel. Turn on the air conditioner after the generator has been running 20 seconds. If it doesn't run, reduce the electrical load and check the circuit breakers in the electrical compartment and the circuit breaker on the generator. Reset any circuit breakers that have tripped and try again.
- Make sure the Electro-Level travel switch is on AUTO. After proper ride height has been established, switch the travel switch to HOLD.
- The fuel tank switch should be pushed toward MAIN. (Both tanks are connected, but when the main goes empty there should still be about seven gallons remaining in the auxiliary tank.)